


SECTION 9


Bullnose Profiles

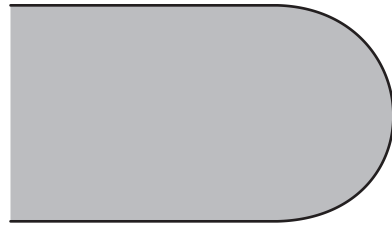


SWD 901 | $\frac{3}{4}$ " x Customer Specs



SWD 902 | $1\frac{1}{8}$ " x Customer Specs

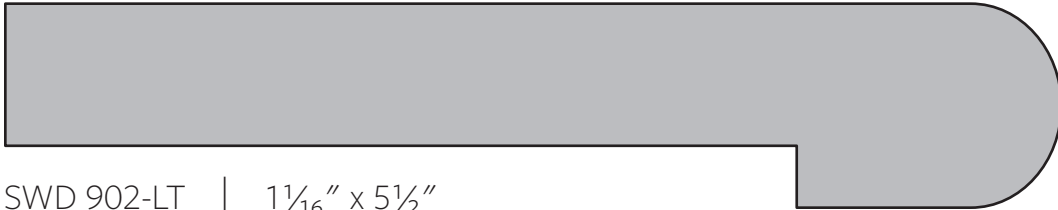


SWD 902-LT | $1\frac{1}{16}$ " x $5\frac{1}{2}$ "

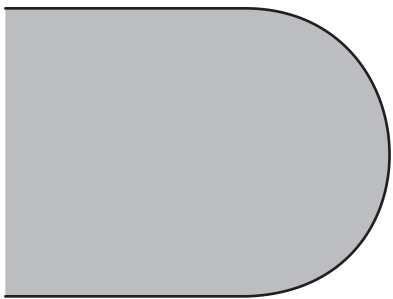


SWD 903 | $1\frac{1}{2}$ " x Customer Specs




SWD 904 | 1" x Customer Specs

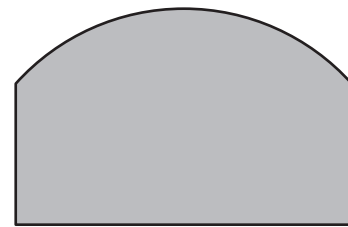

SWD 905 | $1\frac{1}{8}$ " x $1\frac{3}{4}$ "

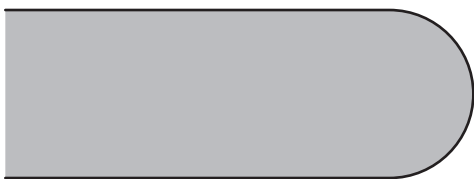


SWD 907 | $\frac{7}{8}$ " x Customer Specs

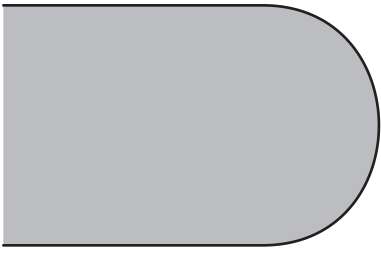


SWD 908 | $1\frac{1}{4}"$ x Customer Specs



SWD 909 | $\frac{9}{16}"$ x $3\frac{7}{8}"$

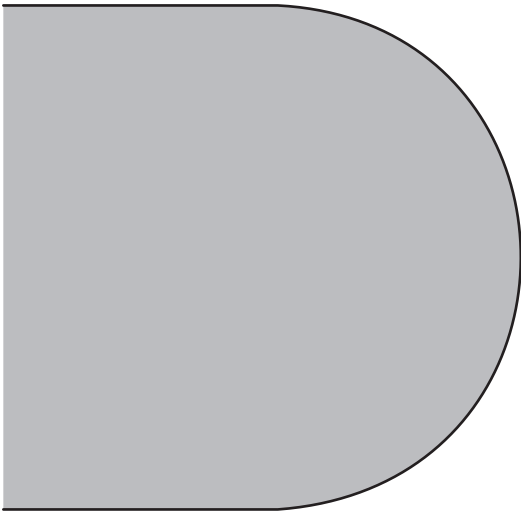


SWD 910 | $2\frac{5}{8}"$ x Customer Specs

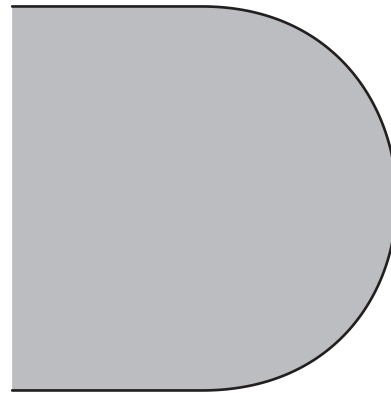


SWD 913 | 2" x Customer Specs




SWD 914 | $\frac{3}{4}"$ x $4\frac{3}{4}"$

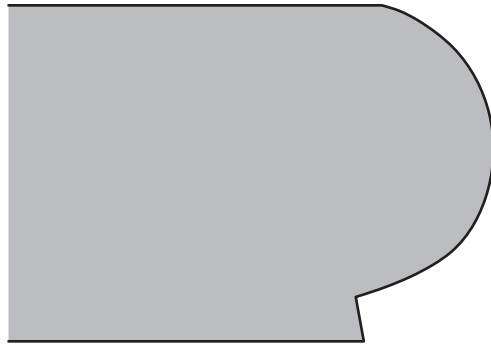

SWD 915 | $1\frac{3}{4}"$ x Customer Specs

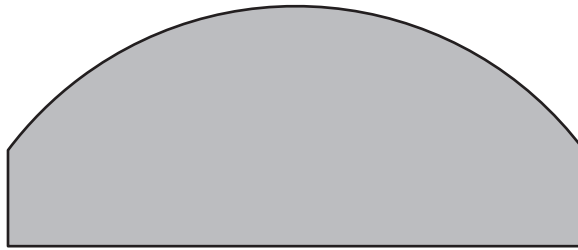

SWD 916 | $1\frac{1}{4}"$ x 3"

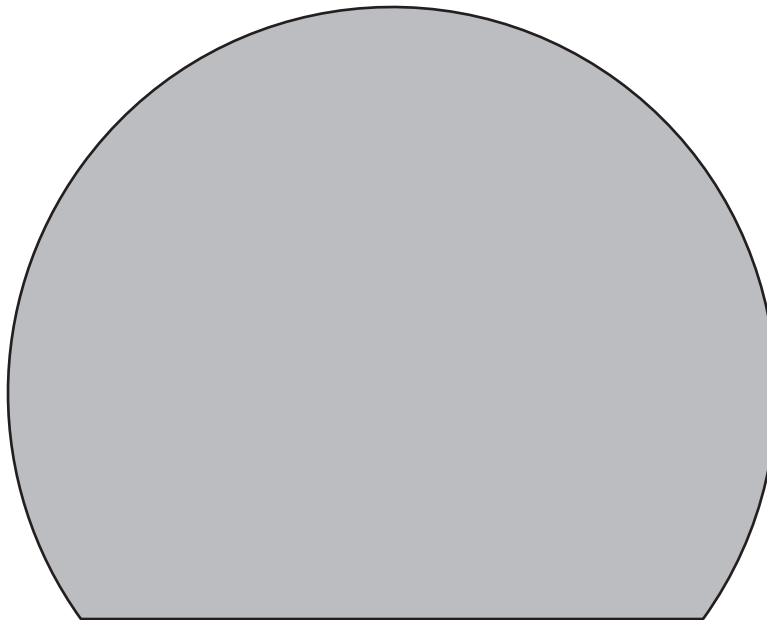

SWD 919 | $3\frac{3}{16}"$ x 4"